



UNPACKING

Place the boxes on the floor with the small label facing up and carefully rip open the sealing tape. Remove the loose parts and the lateral foam packaging with the tweeter attachments and the power supply. If necessary, please move the entire speaker with foam lid and base in the carton so that you can easily grasp the lateral inner packaging. Then tilt the cartons open so that the signs on the sides are facing up and the speakers are facing the right way in the carton. This will allow the speakers to be pulled out of the carton easily.

Remove the packaging lids. On stone or hardwood floors, you can practically use the bottom half of the packaging to slide the speakers to the desired location. Once the speakers are in approximate position, lift them out of the bottom packaging. Remove the tweeter attachments from their packaging, remove the protection, and carefully place each one on top of the enclosure.

To do this, hold the attachments on the left and right and place them at a slight angle with the rear edge first on the housing and then slowly tilt them forward. Connect the colored fork shoes to the WBT terminals from above and tighten them hand-tight.

The standard distance between the transparent tweeter attachments and the front edge of the low-mid speaker should be about one CD length, or about 142 mm. Always make this distance the same on the left and right sides. Avoid pressing strongly on the tweeters or please do not push them out of the transparent attachments. If you use normal speaker cables with 4 mm banana plugs you can leave the WBT bridges connected and plug the banana plugs into the upper row of the 4 input terminals.

We wish you much joy with your new speakers!