

Crate packaging

Your AUDIO FRAME Base, Woofer Modules, and Top Cover are packed in a wooden crate to ensure safe delivery.

The loudspeakers and crates are heavy, so we always recommend having another person help you unpack everything.

Each crate consists of a U-shape with 4 wheels and 3 removable panels marked A, B and C. Always store the loudspeaker/crate in an upright position (handles facing upwards).

Unpack your AUDIO FRAME loudspeaker (starting with the crate positioned on the wheels):

- Unscrew the small bottom panel C.
- Turn the crate upright and unscrew the top panel A.
- Unscrew the large panel B in the upright position.
- Two aluminum rails with M8 threaded screws are used to secure the loudspeakers during transport. Unscrew the two M8 countersunk screws on the lower outside of the crate. Press the U gently apart on the open side and pull the loudspeaker slightly out. Remove all the foam pads, then remove the U and set aside.
- Remove the transport rails with the 4 M8 screws and spring washers.
- Replace the panels marked A, B, and C you removed earlier, storing all parts such as transport rails, foam packaging and any unused screws in the crates.
- Gently remove the protective plastic film from the loudspeaker, taking care so that the fabric grilles don't fall off.
- Remove the rear upper fabric grille and temporarily place it out of the way.
- Unscrew the aluminum top cover's 2 screws and remove the tape securing the cables. Allow the cables to hang down between the upper support and the rear panel. When reattaching the aluminum top cover, pay particular attention to the 2 rubber washers between the top edge and the cover; don't use force to tighten the screws.
- Guide the two cables (that are currently hanging down) through the opening in the aluminum top cover and then return the upper rear fabric grille you set aside earlier back to its place.
- Position the loudspeakers where you want them in your room. The lower chassis of your AUDIO FRAME loudspeakers are now ready for the head modules.

Tip: If you don't have carpeting in your listening room, place a small piece of carpet (or furniture sliders) under the AUDIO FRAME base so that it can slide easily. Only when the loudspeakers are in their final positions do you screw the 4 adjustable feet into the base, lifting it off the floor (and allowing you to pull the carpet/sliders out).