


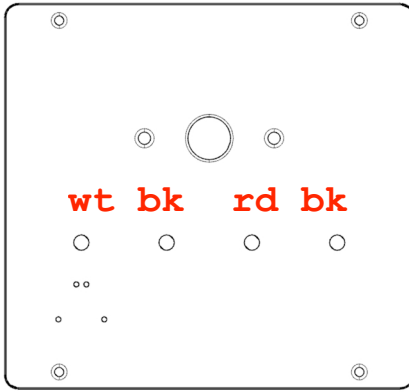

Connecting DFT
bk > bk
rd > wt
means 180° phase



bk > wt
rd > bk
means 0° phase

This also depends
the distance from
the rear
reflective wall.

DFT IN
from IN + -

FC-connector
for WVL PSU only

 WOLFVONLANGA
11620 ORGANIC

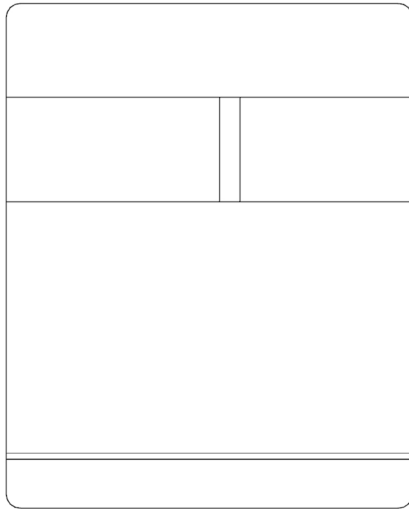

Standard 4/8Ω amp
out to speaker in
rd
bk